

4.7. Fridge NEXT

The temperature controller is on the left side inside the housing of the fridge. After removing the left side panel, adjustment, unit change and calibration of the temperature can be done.

4.7.1. Temperature adjustment

Press  twice.

Modify the temperature with the  buttons.

Confirm the new value with .



The temperature must be set to the highest temperature in the fridge. We recommend to set it to 5 °C/41°F

4.7.2. Temperature offset

- Press  until **<PA1>** appears on the display, approx. 5 sec.
- Press  and **<0>** will appear on the display
- Press  until **<15>** appears on the display
- Press  once; **<dF1>** appears on the display
- Press  until **<CA1>** appears on the display
- Press  once; the shown temperature is the offset-temperature, which mean the correction between the measured and the displayed temperature.
- Measure the milk temperature in the fridge. The milk should be cold and for at least three hours there was no refill.
- Adjust temperature with   until the value in the display corresponds with the measured value
- Press  once and then  to leave programming

4.7.3. Change temperature unit

- Press  until **<PA1>** appears on the display, approx. 5 sec.
- Press  once; **<PA2>** appears on the display
- Press  and **<0>** will appear on the display
- Press  until display shows **<15>**
- Press  once; **<CP>** appears on the display
- Press  once and on the display appears **<dF1>**
- Press  once; **<CP>** appears again on the display
- Press  until display shows **<di 5>**
- Press  once and on the display appears **<LOC>**